

Screw Install Tool (LLCR-S)

Instructions For Use


This screw install tool is applicable for all devices using the **Spring Clamp**, including **BIRDFLAPPA**, **FLAGMARKA** and **LINZEBRA**. This instruction shows the application of the devices with trigger; non-trigger devices are also suitable, to contact Balmoral for more information.

- **This product is to be used by authorised industry trained personnel only.**
- **The use of this product must adhere to appropriate work practises and or industry standards ensuring compliance to all Workplace Health and Safety Regulations.**
- **This product may only be installed onto an asset when the asset owner has approved of such installation.**
- **Failure to follow appropriate work practices and operational instructions or modifications to this equipment can result in product damage and or serious injury.**
- **These instructions are to be read in conjunction with the Balmoral Engineering terms and conditions published on our website.**



Scan the QR code
Or
Click here to watch video

Step 1 Assemble the Screw Install Tool (LLCR-S) to the Hot Stick

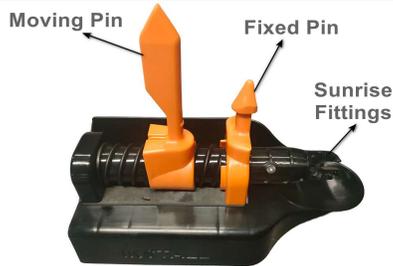

Screw Install Tool, Part No.: LLCR-S




Align the teeth and assemble the Hot Stick onto the Sunrise Fittings.

Step 2 Engage the Device to the Tool



Be aware the Strong Spring, wear protective gloves during the whole process.

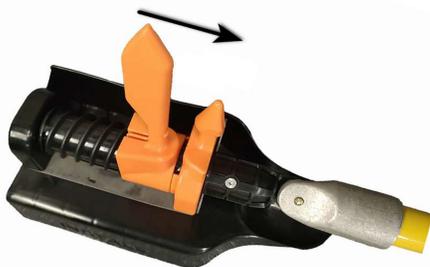


2.1 Adjust the Moving Pin to the bottom until it contacts the Fixed Pin.



2.2 Open the device as shown above until the device is locked by the trigger.



2.3 Firmly press the device on to the Tool. Ensure the clamps' open direction is in the correct orientation, see above left.

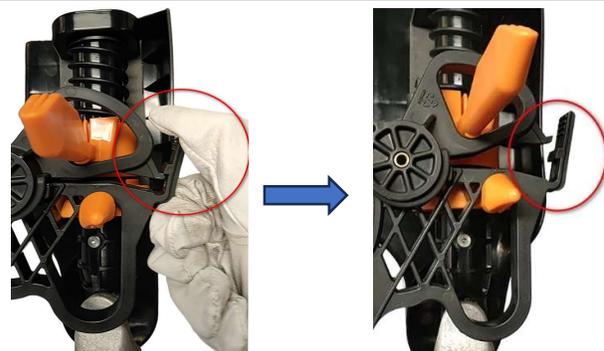


2.4 Release the trigger by pulling trigger as shown above.

Step 3 Install the Device to Powerline




3.1 As shown above, the device is ready to install on the Powerline.

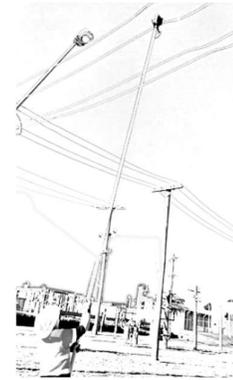


3.2 Check the Label: **Face to the Operator for Installation**, then slowly raise and lean the Tool on to the Powerline.

Face to Lineman/Operator for Installation

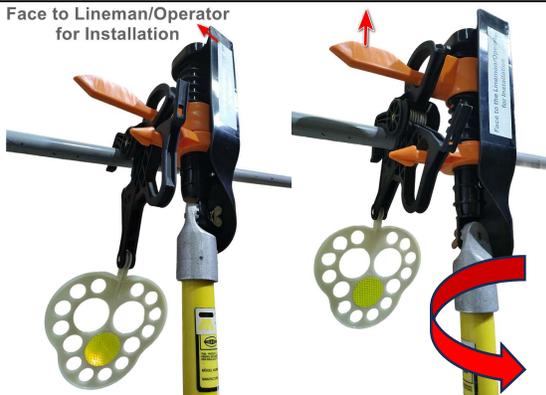

3.3 Rest the top clamp on the Powerline but do not pull it down. Turn the Hot Stick clockwise to release the device onto the Powerline.

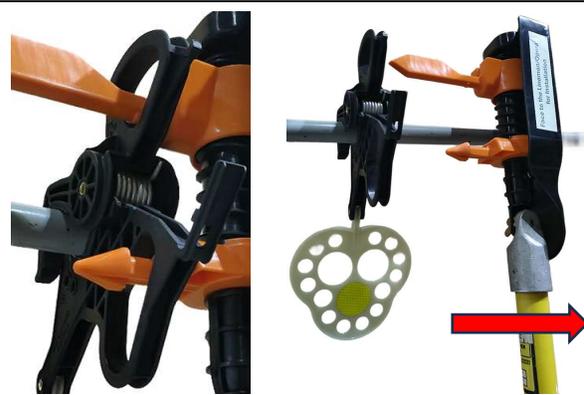


3.4 Once the device is clamped on the Powerline, disengage the tool by sliding it away from the device to complete installation.

Uninstall

Face to Lineman/Operator for Uninstallation



4.1 Check the Label: **Face to the Operator for Uninstallation**, fully open the tool, then slowly raise and lean the Tool on to the Powerline, slide the two Pins from left side into the device.

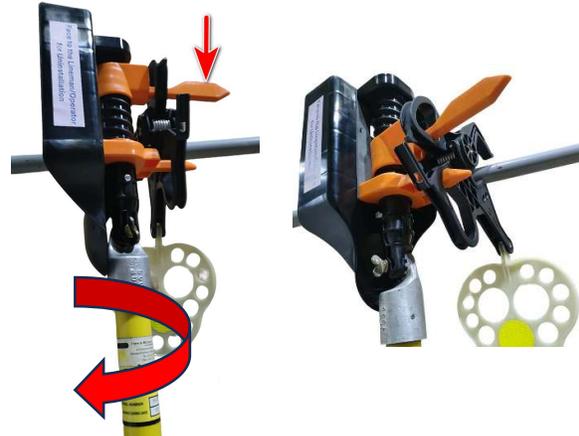

4.2 Turning the Hot Stick in the anti-clockwise direction to open the device's jaws and remove from the Powerline.

For more product information please visit our website: www.balmoralengineering.com